




ShengYin

Shengyin Phone Usage Guidelines

Phone Overview	2
Status Bar Description	2
Battery Status	2
Phone Operation Guide	3
Phonebook	3
Add Contact	3
Edit Existing Contact	3
Call Logs	3
Save to Phonebook	3
Clear All Call Logs	3
Call Log Symbols	3
Wi-Fi Network Settings	4
Settings	4
Device Name	4
Set Password	4
Change Password	4
Clear Password	4
Ringtone Volume	5
About	5
Language	5
Wi-Fi Upgrade	5
Set Time	5
Delete All Data	5
Help	5
Phone Call Functions	6
How to make a call	6
In-call Functions	6


Phone Overview

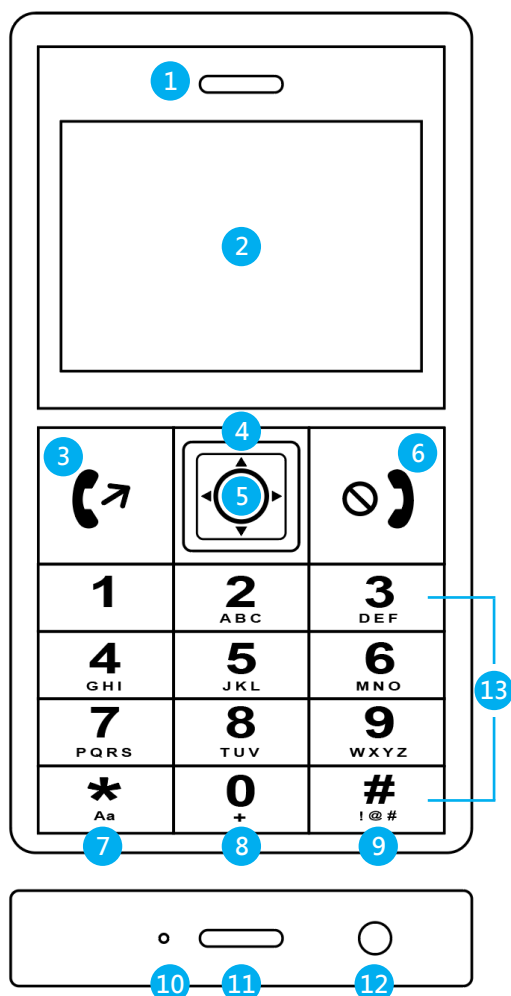

1. Speaker
2. Screen
3. Dial/Answer Key
4. Navigation Key (Up/Down/Left/Right)
5. Confirm Key
6. End Call/Delete/Back Key
7. Toggle Case (Upper/Lower)
8. Hold "2" seconds for "+" symbol
9. Symbol Input Key
10. Microphone
11. Type-C USB Charging Port
12. Headphone Jack
13. Number Keypad - Repeatedly press a number key to input letters (e.g., press "2" twice for "a" , three times for "b" , etc.). Use "*" to toggle between uppercase and lowercase. Use "#" to input symbols. Hold "0" for 2 seconds to insert a "+" .


* Only English and numeric input methods are currently available.

Status Bar Description

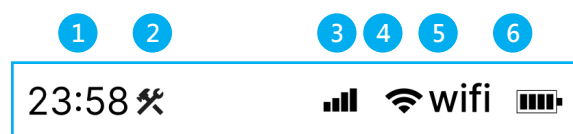

1. Time Display - Set via "Set Time" in Settings.
2. Developer Icon (not shown for general users)
3. Signal Strength
4. Wi-Fi Strength (flashing indicates connecting or searching)
5. Connected Wi-Fi Name
6. Battery Status

Battery Status

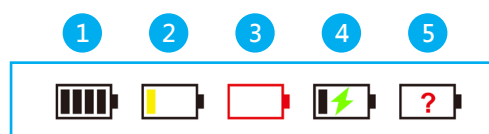

1. Full Battery
2. Low Battery - Please charge immediately.
3. Battery Drained - Will shut down automatically.
4. Charging - Green lightning icon appears.
5. Red question mark - battery issue. Contact your local distributor or email support@shengyin.mobi

Phone Operation Guide

Phonebook

Add Contact

1. Home Screen → Confirm key → Use Up/Down keys to select "Phonebook" → Confirm
2. Select "Add Contact" → Confirm
3. Use keypad to input name
4. Press Confirm to save

Edit Existing Contact

1. Home Screen → Confirm → Select "Phonebook" → Confirm
2. Select existing contact → Confirm
 - Modify: Confirm to edit, then Confirm to save
 - Delete: Confirm to delete, or press Back to cancel

Call Logs

Save to Phonebook

1. Home Screen → Confirm → Select "Call Logs" → Confirm
2. Select a call log → Confirm
3. Choose "Save to Phonebook" → Enter name → Confirm to save

Clear All Call Logs

1. Home Screen → Confirm → Select "Call Logs" → Confirm
2. Select a call → Confirm
3. Choose "Clear All Logs" → Confirm to delete all logs

Call Log Symbols



1. Outgoing call
2. Incoming call
3. Missed call

Wi-Fi Network Settings

ShengYin phones can be used anywhere with Wi-Fi. You must connect to Wi-Fi before use.

1. Home Screen → Confirm → Select "Wi-Fi Network" → Confirm
2. System scans for nearby Wi-Fi networks
3. Select a network → Confirm
 - Lock icon = password required
 - Question mark = unknown network
4. Enter password → Press Dial key to connect

* Wrong password will show a prompt. Press Back to re-enter or Delete to return to Home Screen and choose another network.

Settings

From Home Screen → Confirm → Select "Settings" → Confirm to enter the Setting page to personalize your phone.

Device Name

1. Home Screen → Confirm → Select "Settings" → Confirm
2. Select "Device Name" → Confirm
3. Enter desired name → Confirm – it will replace "ShengYin" on the Home Screen

Set Password

1. Home Screen → Confirm → Select "Settings" → Confirm
2. Select "Password" → Confirm
3. Enter a 4-6 digit password → Confirm
4. Re-enter password → Confirm
5. Password required every time device starts.

Change Password

1. Home Screen → Confirm → Settings → Confirm
2. Select "Password" → Confirm
3. Select "Set Password" to change

Clear Password

1. Home Screen → Confirm → Settings → Confirm
2. Select "Password" → Confirm
3. Select "Clear Password" → Confirm to remove or Back to keep password

Ringtone Volume

1. Home Screen → Confirm → Settings → Confirm
2. Select "Ringtone Volume" → Confirm
3. Choose volume level → Confirm

About

1. Home Screen → Confirm → Settings → Confirm
2. Select "About" → Confirm – view serial number, version, SIM, battery status

Language

1. Home Screen → Confirm → Settings → Confirm
2. Select "Language" → Confirm
3. Choose "English" or "Simplified Chinese" → Confirm

Wi-Fi Upgrade

ShengYin may release updates for performance improvements.

1. Home Screen → Confirm → Settings → Confirm
2. Select "Wi-Fi Upgrade" → Confirm – updates will download and install automatically

Set Time

1. Home Screen → Confirm → Settings → Confirm
2. Select "Set Time" → Confirm
3. Enter date in yyyy/mm/dd (e.g., 2025/05/20) → Confirm
4. Enter time in 24h format hh:mm (e.g., 16:28) → Confirm

Use "" for "/", "#" for ":"

Delete All Data

Deletes all data including passwords.

1. Home Screen → Confirm → Select "Delete All Data" → Confirm
2. Confirm again to proceed, or press Back to cancel

Help

1. Home Screen → Confirm → Select "Help" → Confirm
2. Use Up/Down keys to view basic instructions

Phone Call Functions

How to make a call

1. For US numbers, dial normally. For international calls, enter "+" (hold "0" for 2 sec), then country code and number.
2. On Home Screen, press Dial key to enter Call Logs → Select number → Press Dial again to call

In-call Functions

During a call, options will appear on the screen:

1. Use Up/Down to adjust call volume
2. Left key: Mute/unmute
3. Right key: Toggle speaker on/off

